

Micron Bank change Settings

Program uses banks 0-4,

Bank 0 LSB= 0
 MSB=0

Bank 1 LSB= 1
 MSB=0

Bank 2 LSB= 2
 MSB=0

Bank 3 LSB= 3
 MSB=0

Bank 4 LSB= 4
 MSB=0

Pattern uses banks 200-201,

Bank 200 LSB= 72
 MSB=1

Bank 201 LSB= 73
 MSB=1

Setup uses bank 100,

Bank 100 LSB= 100
 MSB=0

Rhythm uses banks 300-302,

Bank 300 LSB= 44
 MSB=2

Bank 301 LSB= 45
 MSB=2

Bank 302 LSB= 46
 MSB=2