

Roland SH-201 Cheat Sheet

Sound	Filter Velocity	Cancel+Cutoff		
	Amp Velocity	Cancel+Level		
	Pan	Cancel+KeyFollow		
	Overdrive	Overdrive+Level		
LFO	KeyTrigger	LFO+TempoSync	ON key retrigger	
	Fade In	LFO+Rate		
Delay	HF Damp	FX+Depth		
	Feedback	FX+Time		
	Mod Rate	FX+Amp ENV R		
	Mod Depth	FX+Amp ENV S		
Reverb	High Cut	FX+Depth		
	PreDelay	FX+Time		
	Diffusion	FX+Flt ENV D		
	Density	FX+Flt ENV S		
	Size	FX+Flt ENV R		
	LF Damp Freq	FX+Amp ENV A		
	LF Damp Gain	FX+Amp ENV D		
	HF Damp Freq	FX+Amp ENV S		
	HF Damp Gain	FX+Amp ENV R		
Patch Common	Patch Level	Cancel+FX Depth		
	Tone Balance	Cancel+Mix/Mod		
	Split Point	Cancel+Tap - Dual/Split+key - Cancel		
	Octave Shift	Lw/Up+OctUp/Down		
	Portamento Time	Portamento+Time(or 1-8 button)		
	Modulation	Cancel+Tap - User - BankA - 1-8	1 Pitch 2 OSC1 3 OSC2 4 PW1 5 PW2 6 Filter 7 Amp 8 Audio-Fit	
		Cancel+Tap - User - BankB - 1-3	1 Upper 2 Lower 3 Both	
	D-Beam	Dbeam Flt/Assgn+knob/slider Dbeam Flt/Assgn+Lw/Up Cancel+DBeamExpress	Assign Destination Active Expression	
	Pitch Bend Range	Cancel+Tap - Lw/Up+key - Cancel Cancel+Tap - User - BankC - 1-3	1 Upper 2 Lower 3 Both	
	Expression	Cancel+Tap - User - BankD - 1-3	1 Upper 2 Lower 3 Both	
Midi	Rx/Tx Channel	Cancel+Tap - Preset - BankA - 1-8	red Ch 1-8 green Ch 19 - 16	
	Midi-Thru	Cancel+Tap - Preset - BankC - 1-2	1 midi-USB Thru 2 Soft Thru	
	Midi Receive	Cancel+Tap - Preset - BankC - 3-4	3 Program Change 4 Bank Select	
	Midi Transmit	Cancel+Tap - Preset - BankC - 5-8	5 Program Change 6 Bank Select 7 Edit Data 8 Active Sensing	
	Keyboard	Master Tune	Cancel+Pitch	
Octave Shift		Lw/Up+OctUp/Down	octave shift	
Transpose Value		Cancel+OctUp/Down	semitone shift	
Patch Remain		Cancel+Tap - Preset - BankD - 1		
Local On/Off		Cancel+Tap - Preset - BankD - 2		
	Midi Omni Mode	Cancel+Tap - Preset - BankD - 3	keyb disengage	
Pedal	Pedal Polarity	Cancel+Group(Preset/User)	Preset standard User reverse	
	Pedal Assign	Cancel+(1-8)	1 Hold 2 Modulation 3 Volume 4 Balance 5 Pan 6 Expression 7 Start/Stop 8 Arp-Sw	
	Clock Source	Cancel+Tap - Preset - BankB - 1-4	1 Patch 2 System 3 Midi 4 USB	
	Sync	Midi Sync Out	Cancel+Tap - Preset - Play/Stop	
		Metronome	Cancel+Tap - Preset - Rec+Bank	A Off B Rec-only C Rec&Play D Always
	Others	Metronome Level	Cancel+Tap - Preset - Rec+ (1-8)	
		Device ID	Cancel+Tap - Preset - Wide+(1-8)	1 17 2 18 3 19 4 20 5 21 6 22 7 23 8 24