

Korg DW-8000 Angle City - Parameterlist

11	Osc 1	Octave	16'	8'	4'						
12		Waveform	1-16								
13		Level	0-31								
14	Auto Bend	Select	Off	OSC1	OSC2	Both					
15		Mode	Up	Down							
16		Time	0-31								
17		Intensity	0-31								
18 x		Voice B	11-88								
21	Osc 2	Octave	16'	8'	4'						
22		Waveform	1-16								
23		Level	0-31								
24		Interval	+1	-3	+3	+4	+5				
25		Detune	0-6								
26	Noise	Level	0-31								
27 x		Transpose A	0-12								
28 x		Detune AB	0-6								
31	VCF	Cutoff	0-63								
32		Resonance	0-31								
33		KBD Tracking	0	1/4	1/2	1					
34		Polarity	Positive	Negative							
35		EG Intensity	0-31								
36 x		Split Mode	Normal	Split Off/A	Split A/Off	Split A/A	Split A/B	Split B/A	Split AB/Off	Split Off/AB	
37 x		Split Point	0-63								
38 x		Balance A/B	A6/B0	A5/B1	A4/B2	A3/B3	A2/B4	A1/B5	A0/B6		
41	VCF EG	Attack	0-31								
42		Decay	0-31								
43		Breack Point	0-31								
44		Slope	0-31								
45		Sustain	0-31								
46		Release	0-31								
47		Velocity Sense	0-7								
48											
51	VCA EG	Attack	0-31								
52		Decay	0-31								
53		Breack Point	0-31								
54		Slope	0-31								
55		Sustain	0-31								
56		Release	0-31								
57		Velocity Sense	0-7								
58											
61 x	MG	Waveform	Triangle	Sawth Down	Sawth Up	Square	S/H				
62		Frequency	0-31								
63		Delay	0-31								
64		Osc	0-31								
65		VCF	0-31								
66	Bend	Osc	0-12								
67		VCF	Off	On							
68											
71	Digital Delay	Time	0-7								
72		Factor	0-15 (x0.5-x1.0)								
73		Feedback	0-15								
74		Mod Frequency	0-31								
75		Mod Intensity	0-31								
76		Effect Level	0-15								
77	Portamento	Time	0(Off)-31								
78 x		Midi Send	All 84	B 84 / A88	A 88 / B 84						
81	After Touch	Osc MG	0-3								
82		VCF	0-3								
83		VCA	0-3								
84	Midi	Channel A	1-16								
85		Enable	Note Data	All							
86		Omni	Off	On							
87		Arpeggio Clock	1/16 Int	1/8 Int	1/4 Int	1/16 Ext	1/8 Ext	1/4 Ext			
88 x		Channel B	1-16								