


## DK 70 modification


On the following two pictures you see 3 extra pots for filter, resonance and gain.



This mod will make the filter self-resonance and scream and the gain up to overdrive/distort. You better watch your ears!!

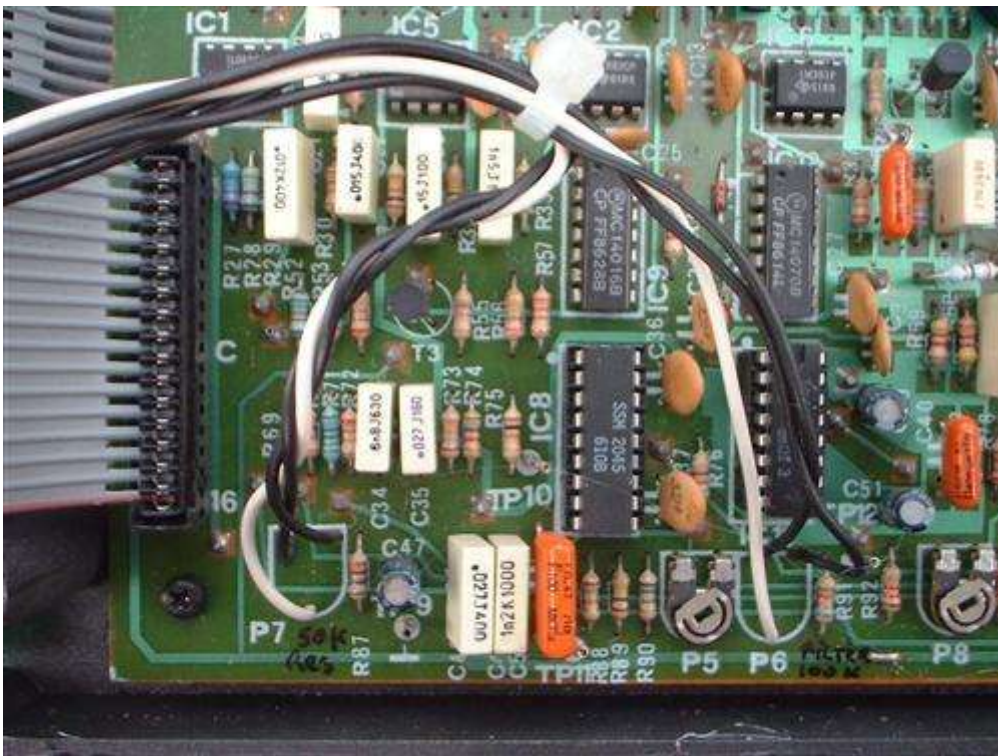

Remove trimmer pots P6, 7 and 3. Solder wires to the empty solder points and connect the other side to the external potmeters.

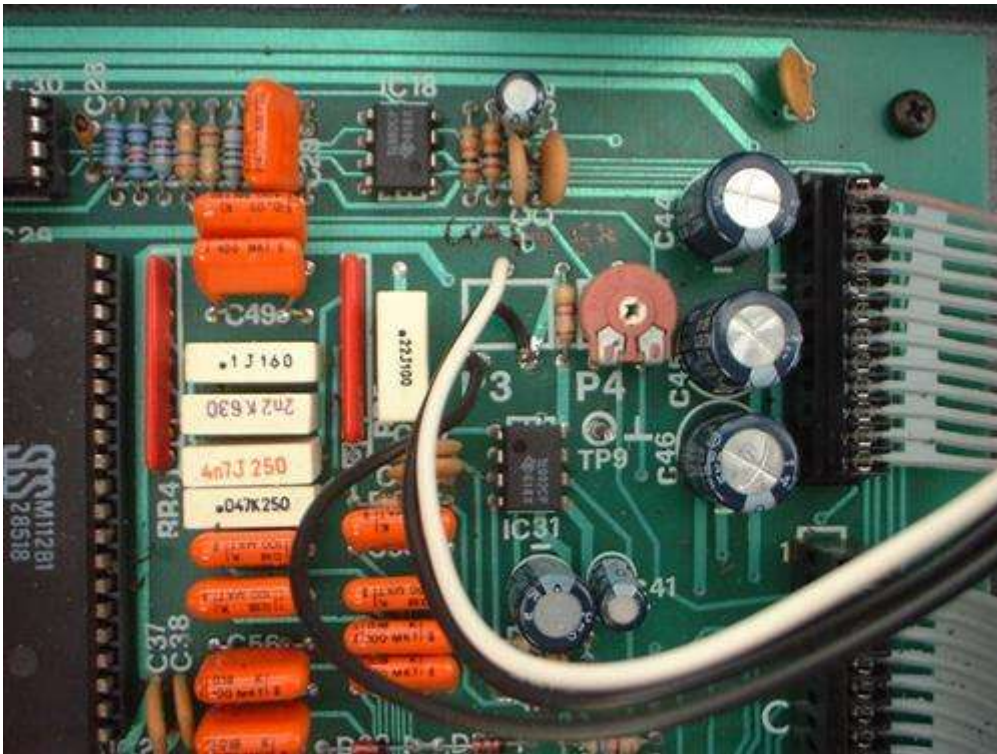

Replace the trimmers as follow:

- P7 - Resonance - 50k lin pot
- P6 - Filter - 100k lin pot
- P3 - gain - 5k log pot