

How to Update Your Blofeld Desktop or Keyboard

Step 1

Be sure that your Blofeld is connected via USB to your computer directly, without any USB Hub or other hardware.

Step 2

Download the Waldorf Spectre App.

<https://support.waldorfmusic.com/products/Blofeld>

Install Spectre in your applications folder.

Download the latest firmware.

<https://support.waldorfmusic.com/products/Blofeld>

Unzip the firmware.


Step 3

Launch Spectre.

Click “Audio/MIDI” to configure Spectre for your current system.

The important settings is “Midi Output”.

Here you have to choose your Blofeld.

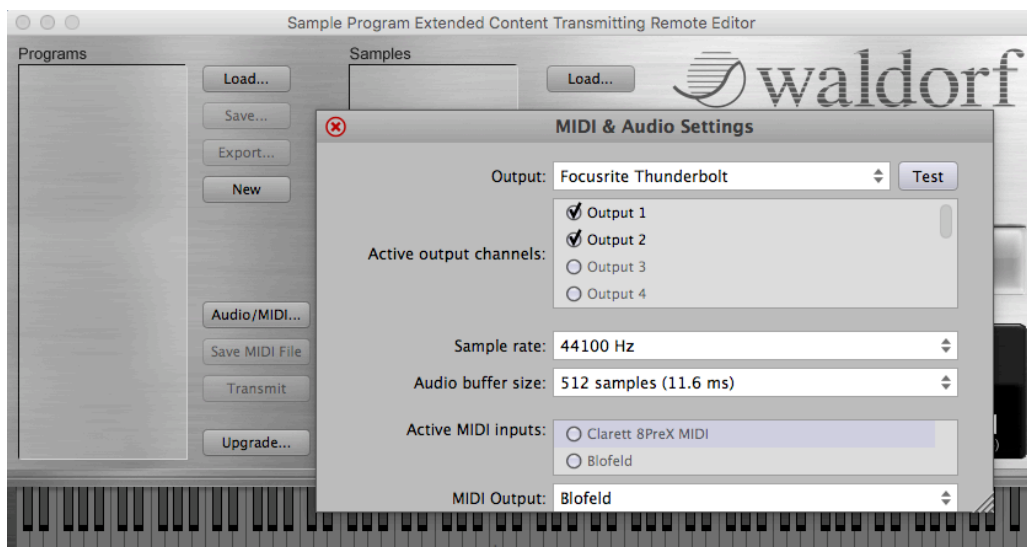

Close the MIDI & Audio Settings window.

Step 4

Click “Upgrade”, choose the firmware you have downloaded and click „Open“.

Wait till the update gets to 100 % and press the Play button on your Blofeld.

Do not TURN OFF your Blofeld. The Blofeld restarts.

That's it, have fun with your Blofeld!

Your Waldorf Team.